

← Matching Tables		00	01	02	03	04	05
Toll/Code restriction ↓ class	Description	111 911 999	1 ~ 9 0800 0508 0125	01 ~ 09	00	021 025 027 029	0900 010 018 0170 0172
01	Toll Allow, 0900 BAR	A	A	A	A	A	D
02	0900, IDD BAR	A	A	A	D	A	D
03	LOCAL	A	A	D	D	D	D
04	INTERNAL	A	D	D	D	D	D
05	LOCAL & CELL	A	A	D	D	A	D

TOLL BAR TABLES FOR XEN

A = Allowed, U = Don't care, D = Denied

8 DIGIT TABLE TO CLASS

Toll Restriction Class	Matching tables	Allow / Deny
01	00	A
	01	A
	02	A
	03	A
	04	A
	05	D

02	00	A
	01	A
	02	A
	03	D
	04	A
	05	D

03	00	A
	01	A
	02	D
	03	D
	04	A
	05	D

04	00	A
	01	D
	02	D
	03	D
	04	D
	05	D

05	00	A
	01	A
	02	D
	03	D
	04	A
	05	D

	CLASS TABLES	
Class	00	D
	01	D
	02	D
	03	D
	04	D
	05	D

Untitled - Expanded - Xen IPK MAT

File Edit Basic Application User Communications Help

Class Table

Tab 2 of 18 Code Restriction Wizard

Page 1/2

Conflict Action

8-Digit Table to Class - Table#

Class#	00	01	02	03	04	05	06	07	08	09	10	11	12	13	14	15	
01	A	A	A	A	A	D	U	U	U	U	U	U	U	U	U	U	D
02	A	A	A	D	A	D	U	U	U	U	U	U	U	U	U	U	D
03	A	A	D	D	D	D	U	U	U	U	U	U	U	U	U	U	D
04	A	D	D	D	D	D	U	U	U	U	U	U	U	U	U	U	D
05	A	D	D	D	A	D	U	U	U	U	U	U	U	U	U	U	D
06	D	U	U	U	U	U	U	U	U	U	U	U	U	U	U	U	D
07	A	U	U	U	U	U	U	U	U	U	U	U	U	U	U	U	D

Matching Table

Toll Class

Table : Enter A (Allow), or D (Deny) or U (Unused)

Class : Enter A (Allow) or D (Deny)

[Alt+FZ] Wizard mode

A=Allow, D=Deny, U=Unused

Conflict action means: If there are two codes in the toll tables that conflict. I.e it is allowed and denied in the same toll class then the above action will be to deny the call.